


Controlling Your Television and other A/V Devices

The URC 4 can also be used to control TVs and other A/V devices such as DVD players and recorders. The URC 4 uses InfraRed (IR) light signals to control other devices that the remote is programmed to control. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the URC 4 directly at these devices, with no objects blocking the line of sight.

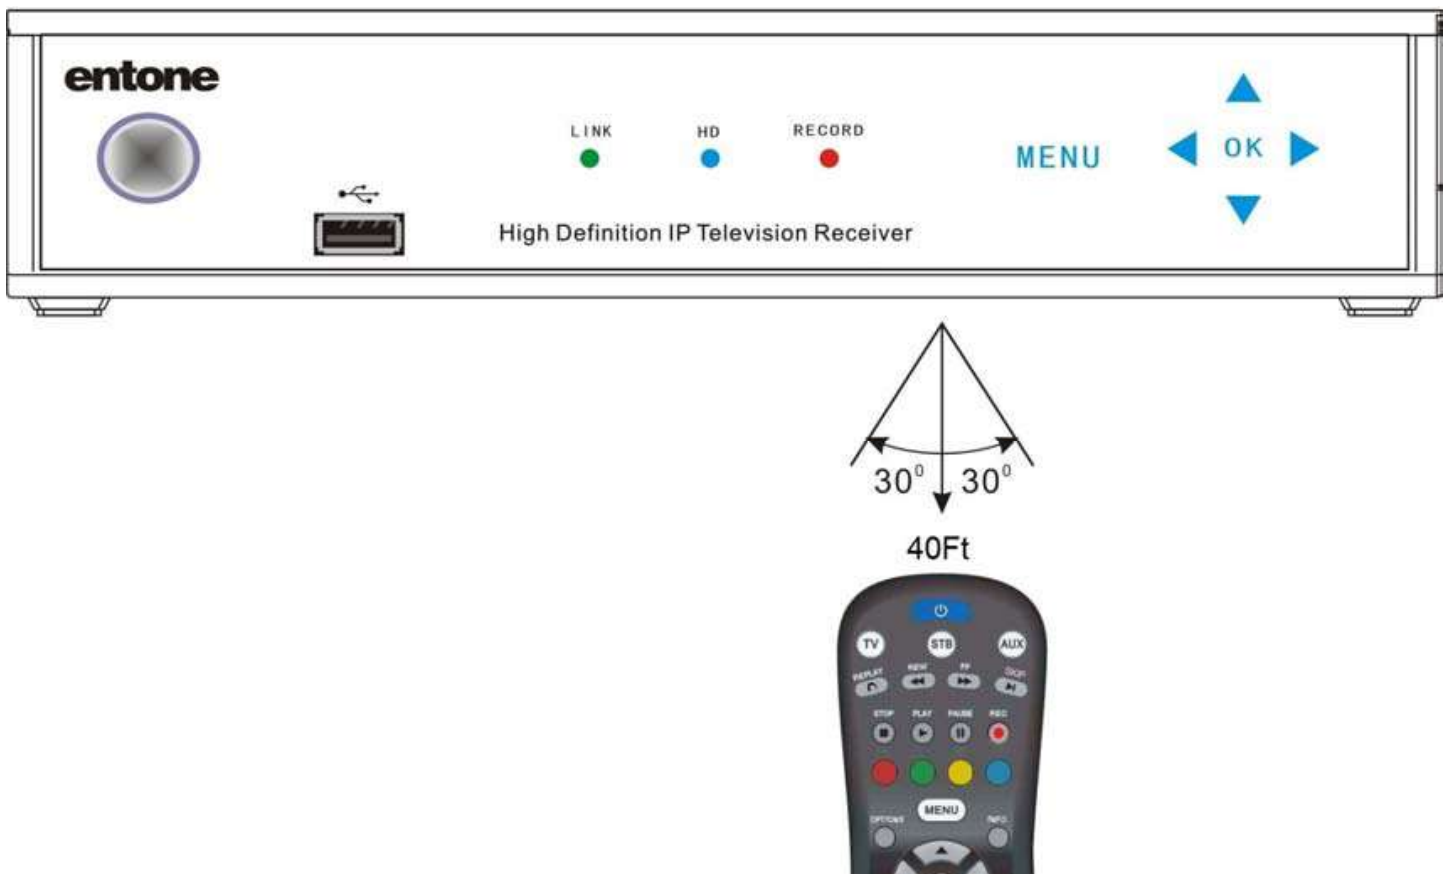

You can program URC 4 to control one TV and one AUX device. Use the remote control's mode keys (i.e., "STB", "TV", or "AUX") to control a specific device. When pressed, the selected mode key will light up confirming your choice. Then you can use the URC 4 to control your STB, TV or AUX device. You have to program the URC 4 what TV and AUX devices you are using by either 1) entering the 4-digit device code 2) doing an auto search.

NOTE:

- The POWER key can be configured to control both the STB and TV while the URC 4 is in "STB" mode, please refer to the section "Toggle Power Key Punch-through Functionality" in Chapter 4 for details.
- The Volume +/- and MUTE key can be configured to control both the STB and TV while the URC 4 is in "STB" mode, please refer to the section "Toggle Volume Key Punch-through Functionality".

To Program a TV or AUX Device

1. Locate the device code for your desired device in the device code table provided in the Appendix. If you could not find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can go to the next section to try the auto search procedures.

2. Turn on your device and with media inserted (if applicable).

3. On the remote control, press a device mode key for 5 seconds (i.e., "TV" or "AUX"). The device mode key will light up.

NOTE: Use the "AUX" mode key to program control of VCR, DVD player, cable box, satellite set-topbox and audio device.

4. Enter the four-digit device code for your device. If you perform this procedure correctly, the selected device mode key backlight will blink twice.

NOTE: If you enter an invalid device code, the selected device mode key will fast blink 7 times. Device program mode will be terminated.

5. 5. Aim the remote control at your device and press the "POWER" once. The device should be turned off. If it does not respond, repeat the above steps.

NOTE: In the programming mode if no key is received within 30s, the device mode key backlight will blink rapidly for 7 times to indicate an error and then extinguish, and the programming mode will end.