Parental Controls



Many parents are concerned about their children watching unsuitable programming. To offer parents more control over the programming and content their children can access, Parental Controls enable parents to selectively block programming by channel or rating.

Note: Parental Controls will not appear until you have created Parental Control in Settings.

Turn Parental Controls Off/On

Parental Controls are active once you have enabled them in the **Settings Menu**. See Enable Parental Controls in the Settings section for instructions.

- a) To turn **Parental Controls Off** or **On**, press **Menu** on the remote control, navigate the highlight to **Control On/Off**, and press **OK**.
- a) Enter your account password and press **OK** to update the **Parental Controls** status.
- b) Press **Edit** on your remote control to leave the **Menu**.