

# How to Lock TV Channel Up / Down Keys

## Toggle Channel Up/Down Keys for TV/AUX

Every time user programs a new TV or AUX code, by default, the **Channel Up** and **Channel Down** keys are working as normal for TV or AUX device. However it is possible to toggle ON/OFF these two keys in their mode.

User can enable **channel up/channel down** keys feature for TV or AUX by pressing the following key sequence:

Enable Channel Up/Down key for TV mode:

1. Press and Hold **TV** key for 5 seconds
2. Press **Channel Up** to enable it.

Disable Channel Up/Down keys for TV mode

1. Press and Hold **TV** key for 5 seconds
2. Press **Channel Down** to enable it.

Enable Channel Up/Down key for AUX mode:

1. Press and Hold **AUX** key for 5 seconds
2. Press **Channel Up** to enable it.

Disable Channel Up/Down keys for AUX mode

1. Press and Hold **AUX** key for 5 seconds
2. Press **Channel Down** to enable it.