


How to Create a Favorites Guide



It's easy to enjoy the channels you watch the most with personalized Favorites lists. You can create multiple Favorites lists and quickly change the Guide to display one of the Favorites lists.

Create/Edit a Favorites List

- a) Press **Menu** on your remote control, navigate the highlight to **Favorites**, and press **OK** on the remote control.
- b) Arrow **Down**, highlight **Create**, and press **OK**.
- c) Press **OK** again to edit your favorites name. Navigate the highlight to **Clear**, next use the **Up/Down/Left/Right** arrows to highlight the letters on the on-screen keyboard to enter the name of the list.
- d) Navigate the highlight to **Done** and press **OK**.

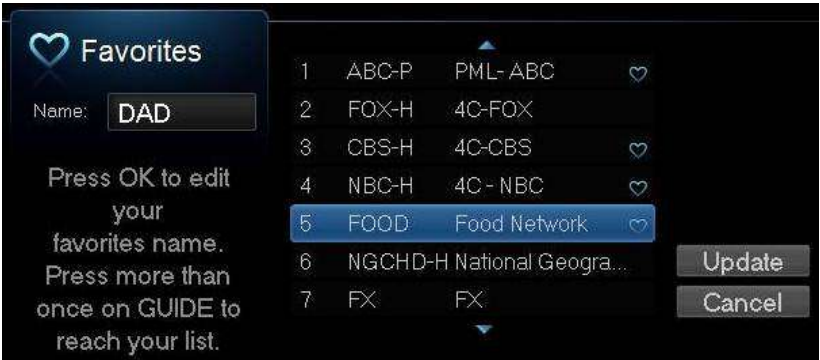

- e) Arrow **Up/Down** to select the channels you want to add to your list. Highlight the channel, press **OK** on the remote control, and the favorites icon will appear on the right of the channel you select. Continue to add or remove channels from your favorites lists by repeating these steps.
- f) When you are finished making your selections, arrow **Right**, highlight **Update**, and press **OK**.

Now you can view only your favorite channels in the Interactive Guide. Repeatedly press **Guide** on your remote control to cycle through your favorites lists. Once you have cycled through all favorites lists, the Guide will Edit.



Delete a Favorites List

- a) Press **Menu** on your remote control, navigate the highlight to **Favorites**, and press **OK** on the remote control.
- b) Arrow **Down**, highlight **Delete**, and press **OK**.
- c) Arrow **Up/Down** to select the favorite list to delete and press **OK** to highlight the list. Navigate the highlight **Down** to **OK**, and press **OK** on your remote control.
- d) A box will appear asking you to confirm that you want to delete the selected favorites list. Highlight **Yes** to delete or **No** to **Cancel**, and press **OK**.