
## Reminder & Autotune Timers

You can set timers to remind you of the programs you want to watch.

- Timer Symbols
- Reminder
- Autotune
- Multiple Reminder
- Multiple Autotune

## **Setting a Reminder Timer**

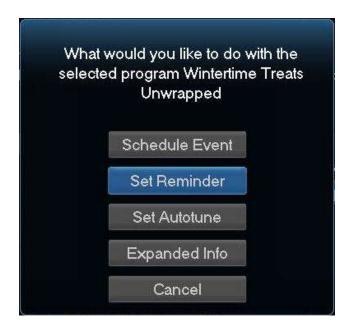

- a) Press the **Guide** button on the remote control.
- b) Navigate to future programs by using the arrow buttons on the remote to move the highlight through the **Guide**.
- c) Press **OK** on the program that you want to set the reminder for. Select **Set Reminder**. A yellow clock symbol on the **Guide** indicates that a Reminder Timer is set.
- d) Press **Edit** to return to watching TV.

A **Reminder Timer** message will appear on your screen reminding you of the program just before it begins. Press **Info** to view the **Reminder** or press **Cancel** to edit out of the **Reminder**. When you press **Info** on the **Reminder** message, press **OK** on the program name to tune to the program.

## **Setting an Autotune Timer**

- a) Press the **Guide** button on the remote control.
- b) Navigate to future programs by using the arrow buttons on the remote to move the highlight through the **Guide**.
- c) Press **OK** on the program that you want to set the **Autotune** timer for. Select **Set Autotune**. An orange circle symbol on the **Guide** indicates that an **Autotune Timer** is set.



d) Press **Edit** to return to watching TV.

Before the program begins, an alert will appear on your screen giving you the option to tune in or Cancel. You can edit the Autotune Alert Timer notification to 0 seconds <default>, 30 seconds, 2 minutes or 5 minutes through Settings on the Menubar.

## **Schedule Event**

You can create reoccurring Reminder and Autotune Timers through Scheduled Events.

- a) Press Menu on your remote control, navigate to Recordings, then Down to Schedule Event, and press OK. You can Edit the channel number, time, type of timer (Recording, Reminder or Autotune) and frequency of the event.
- b) Highlight **OK** and press **OK**.